 

PFB D01 D02


Dimensions [mm]

Installation






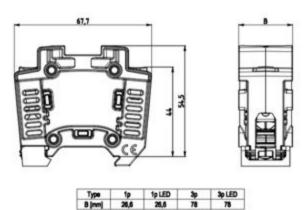

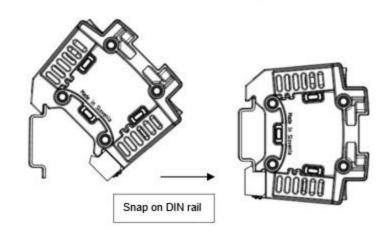


Fuse link replacement


Disassembly

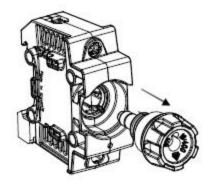


Unscrew the cap

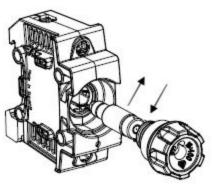

Replace the fuse link

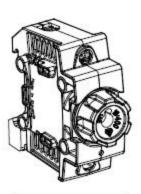

Screw the cap back

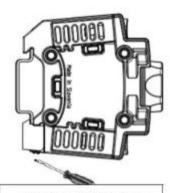

Using a screwdriver pull down on the plastic snap-on unit

