
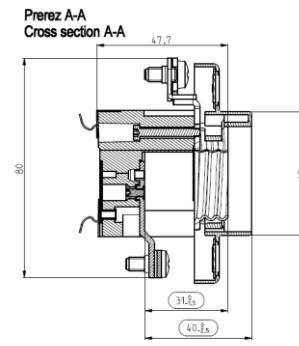


Fuse base D 1p 3p

INSTALLATION INSTRUCTION



Fuse base D 1p 3p

Dimensions [mm]

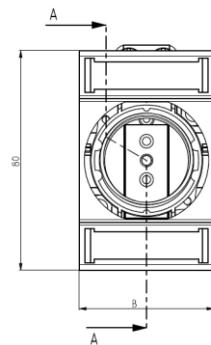


1p		3p	
TYPE	B [mm]	TYPE	B [mm]
EZN 25	39	EZN 25/3	121
EZV 25	39	EZN 25/3-ZP	121
EZN 25-ZP	39	EZN 63/3	148
EZV 25-ZP	39	EZN 63/3-ZP	148
EZN 63	46		
EZV 63	46		
EZN 63-ZP	46		
EZV 63-ZP	46		
EZN 63-M6	46		
EZV 63-M6	46		

Installation

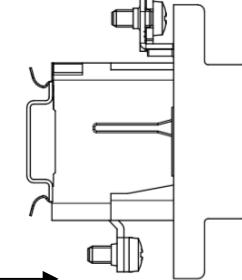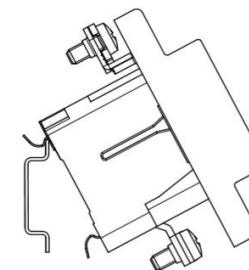

Snap on DIN

Fuse link replacement

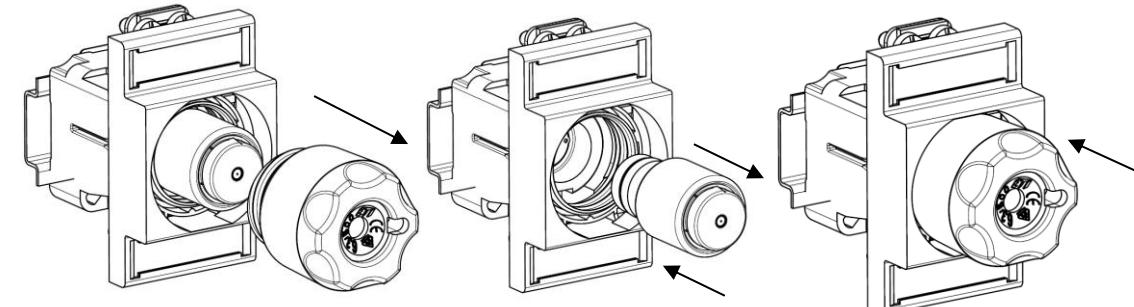


Unscrew the
fuse carrier.

Replace the
fuse-link.

Screw back the
fuse carrier.

Disassembly

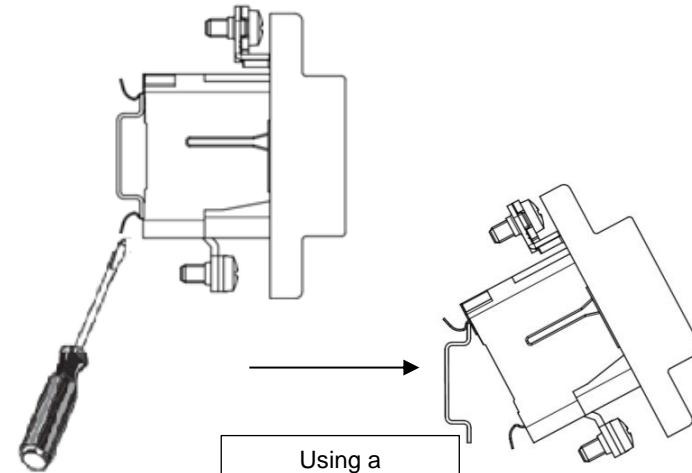

Using a
screwdriver, pull
down on the metal
snap-on unit.